


## Shaping the Otter turret

to shape PE turret is much easier than it looks, give it fast blast with a lighter to soften brass and reduce its tension, then simply pull brass around any metal or another suitable rod, while pushing it against surface. It shapes itself. It also works well, just to roll it around a rod. Once ready, glue or solder both other parts, and it is ready for assembly. When you glue bottom on plastic base, its top copies it as well, and you get perfectly rounded piece.

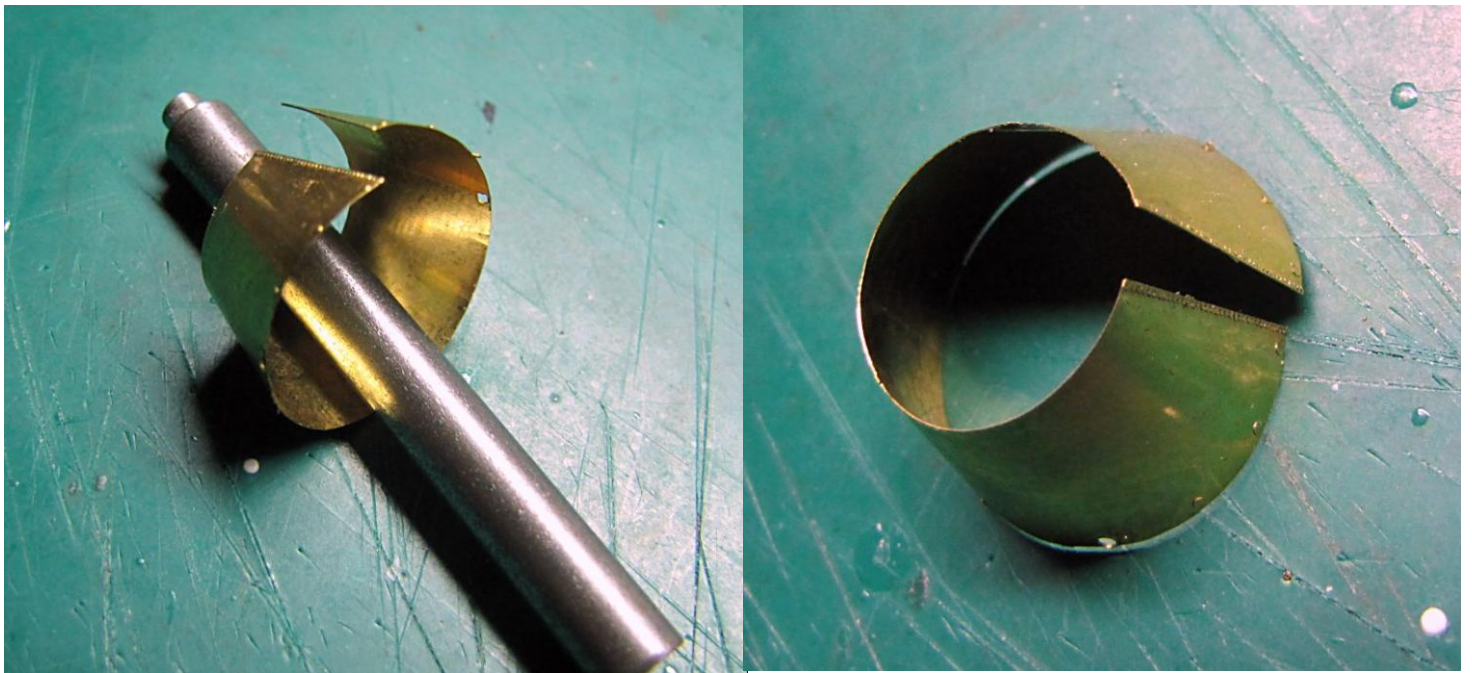

Plastic option because of injection molding limits regarding minimal wall thickness to fill the design properly looked strange, that we decided not to use it. The same for Bren gun assembly, it would be double thick than it is supposed to be.