

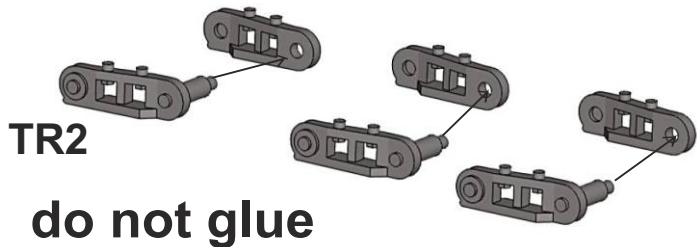




TR3





TR1

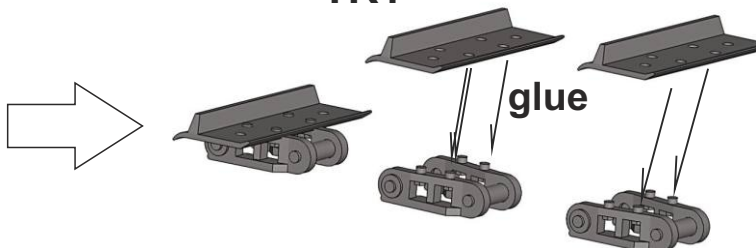

click together

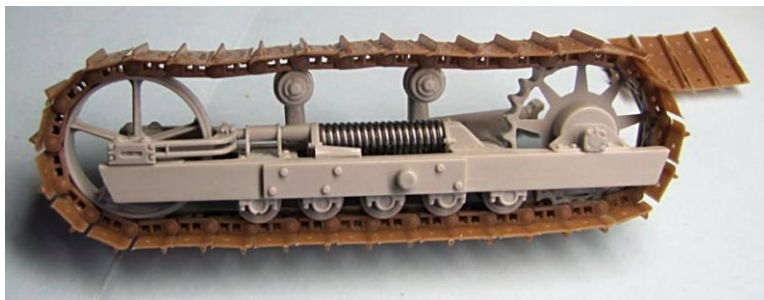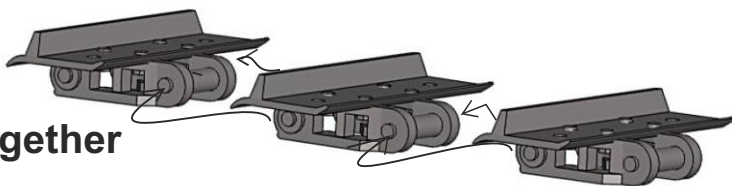

Mind correct direction of tracks!
Track links are workable, however it is recommended to assemble them in short sections around leaving the top for the end, and secure them with glue

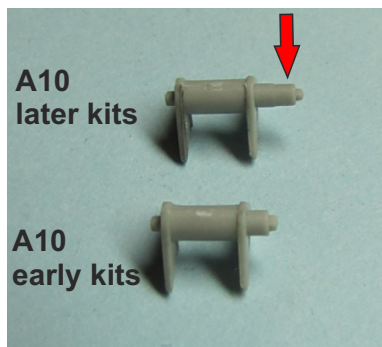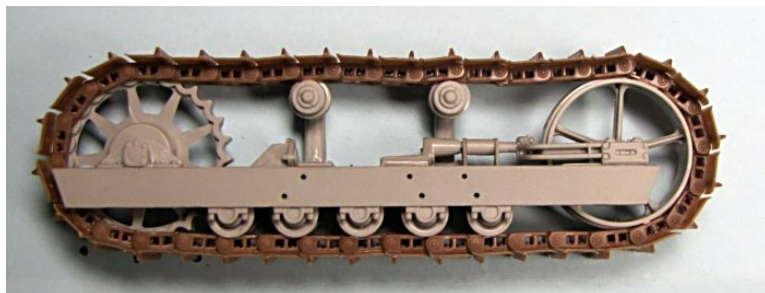

Early produced kits with shorter A10 pin assemble 35 links per track
Later produced kits with longer A10 pin assemble 36 links per track - you can also shorten front rod a little (0,1-0,2mm) to adjust - loose tension of the track